

Trouble Conditions & Beeps

- Causes for Trouble Light to be on

** If your keypad has a Trouble beep every 10 seconds, press the # key to silence the beeping **
- To view cause of Trouble light, press *2 on the Keypad, a zone light comes on to indicate trouble

Zone light

ZONE 1 is lit

ZONE 2 is lit

ZONE 3 is lit

ZONE 4 is lit

ZONE 5 is lit

ZONE 6 is lit

ZONE 7 is lit

ZONE 8 is lit

When done Press ##

Trouble

Low Battery (call High-Tech at 416-410-4746 to schedule battery replacement)

AC failure (loss of electrical power, make sure transformer has not been removed)

Dial Tone Failure (Check alarm telephone RJ Block and Home Phones)

Failure to Communicate with Central Monitoring Station
Test system, refer to "Testing Your System")

Zone Fault including, Fire Zone
Press 5 to view affected zone

Zone Tamper, Press 6 to view affected zone number

If you have wireless zones:
Wireless Sensor Low Battery Press 7 to view affected zone

Loss of Clock

(Reset Time and date, refer to "Setting Time and Date")