

CHANGING THE USER CODE

- STEP 1 . . . Press and hold down the '8' button for 3 seconds, until you hear a long beep
- STEP 2 . . . Immediately enter the MASTER CODE (Call 416-410-4746 if you do not know remember your Master code). The keypad lights will flash and the sounder will beep. You are now in the programming mode.
- STEP 3 . . . Press the 'A' (Bypass) button. Do not hold it down.
- STEP 4 . . . Press the '1' button to place a code in position one. You have up to 5 positions for up to 5 different user codes.
- STEP 5 . . . Enter your new 4 digit code. Do not use a '0'. Do not begin with a '9'.
- STEP 6 . . . Press the 'A' (Bypass) button 2 times in a row to exit programming.
- TO REMOVE A CODE, FOLLOW STEPS ABOVE EXCEPT STEP 5.

SMOKE DETECTOR ALARM IS SOUNDING

REASON . . . A smoke condition exists or possibly the steam from a shower could have tripped the alarm. Construction in the home, including painting can damage the smoke detector if it was not covered.

REMEDY . . . ENTER YOUR CODE 2 TIMES IN A ROW TO STOP THE LOUD ALARM. IF THERE IS A 'P' SHOWING ON THE SCREEN ENTER YOUR CODE ONLY 1 TIME. WHEN THE SMOKE OR STEAM IS CLEARED, PRESS AND HOLD THE '9' RESET BUTTON TO STOP THE SOUNDER. IF THERE IS NO SMOKE BUT CONDITION EXISTS CALL 416-410-4746 TO SCHEDULE A SERVICE CALL