



User's Quick Reference Guide

KEYPAD OVERVIEW

ARM LIGHTS

(for Regular & Force Arming) - - - -

- ON** = partition 1 or 2 armed
- OFF** = partition 1 or 2 disarmed
- FLASH** = partition 1 or 2 in alarm

AC LIGHT

- ON** = AC power
- OFF** = power failure

STATUS LIGHT

Green:


- ON** = zones closed
- OFF** = zone(s) open
- FLASH** = exit delay

Red (1641 only):


- ON** = system armed
- FLASH** = stay armed
- FAST FLASH** = alarm

Made a mistake?

Press **[CLEAR]** to erase an entry or revert to last step.

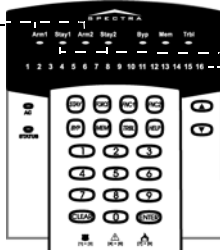

LED 1689 keypad

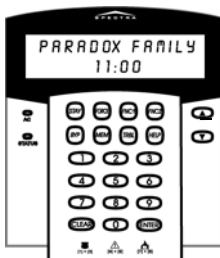

LCD 1641 keypad

STAY LIGHTS

(for Stay & Instant Arming)

- ON** = partition 1 or 2 armed
- OFF** = partition 1 or 2 disarmed
- FLASH** = partition 1 or 2 in alarm

ZONE DISPLAY

The numbers represent zones 1 to 16. When illuminated, the zones are open or breached.

FNC1 BUTTON

Your system may have one or more home automation options. One of these options may be triggered directly from the keypad. Press **[FNC1]** and hold for 3 seconds to activate :

(i.e. reset smoke detector, activate lights, etc.).

- Use the arrow buttons to scroll menu or choices.

ARMING AND DISARMING

TO ARM WHEN LEAVING...



To Regular Arm : Arm entire partition when all zones are closed

Enter your **[ACCESS CODE]*** (or press **[ENTER]†** and hold for 3 seconds).

To Force Arm : Arm partition without waiting for all zones to close

Press **[FORCE]** and enter your **[ACCESS CODE]*** (or press **[FORCE]†** and hold for 3 seconds).

TO ARM WHEN STAYING...



To Stay Arm : Arm partition's perimeter, which allows you to remain in the protected area

Press **[STAY]** and enter your **[ACCESS CODE]*** (or press **[STAY]†** and hold for 3 seconds).

To Instant Arm : Stay arm partition, but if any armed zones are breached, it will instantly cause an alarm

Stay arm and press **[STAY]** and hold for 3 seconds during the Exit Delay.

To Disarm :

enter your **[ACCESS CODE]***.

** If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.*

† Must be enabled by your Installer.

PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed in the table below for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] and [3]
Medical	Press [4] and [6]
Fire	Press [7] and [9]

TROUBLE DISPLAY

When a trouble condition occurs, the **[TRBL]** symbol will flash (1689) or the message "System Trouble **[TRBL]** to view" will appear on the screen (1641).

1. Press **[TRBL]**.
2. Numbers corresponding to troubles will illuminate (1689) or use **[▲]** or **[▼]** to view the occurring trouble(s) (1641). Please consult Trouble List in the user manual or contact your Security Company for repairs.
3. Press **[CLEAR]** to exit.

BYPASS PROGRAMMING

Bypassed zones remain unarmed when the partition is armed.

1. Press **[BYP]** and enter your **[ACCESS CODE]** (or press **[BYP]**† and hold for 3 sec.). If needed, press button(s) to choose partition(s).
2. Enter the zone number or scroll the list and press **[BYP]** when the desired zone appears on the screen (1641).
OR
Press **[BYP]** for Bypass Recall. (To re-bypass the zones bypassed during last armed period).
3. Press **[ENTER]** to exit.

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period :

1. Press **[MEM]**.
2. The zones that were in alarm will illuminate (1689) or use **[▲]** or **[▼]** (1641) to view the zones that were breached.
3. Press **[CLEAR]** to exit.

KEYPAD SETTINGS (1641 ONLY)

You can modify the keypad's settings to suit your needs.

1. Press and hold **[6]** for 3 seconds.
2. Choose one. Press :
[1] Backlight : keypad's light (7 is brightest)
[2] Contrast : character intensity (7 is lightest)
[3] Scroll Speed : time between messages (7 is slowest)
3. Press **[▲]** or **[▼]** to modify.
4. Press **[ENTER]** to save.
5. Return to step 2 or press **[CLEAR]** to exit.

CHIME PROGRAMMING

Keypad beeps when the zone opens.

1. Press **[9]** for 3 seconds.
2. Enter the 2-digit zone number or scroll the list and press **[FNC1]** when the desired zone appears on the screen (1641).
3. Press **[ENTER]** (1689) / **[CLEAR]** (1641) to exit.

†Must be enabled by your Installer.

© Paradox Security Systems Ltd., 2003. Spectra is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.

P ▲ R ▲ D O X
S E C U R I T Y S Y S T E M S
780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA
Tel.: (450) 491-7444 Fax: 450) 491-2313

www.paradox.ca

PRINTED IN CANADA 11/2003

SPEK-EQ01